
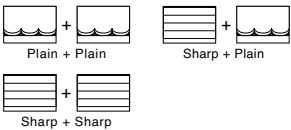

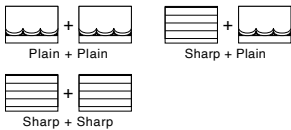


Creaty

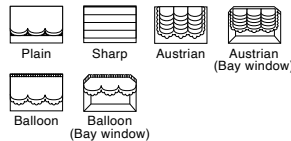


- The Loopless type Creaty for child safety allows, easily operate the shade with one cord.
- Speed Controller of Creaty Drum type prevents a rapid fall of the shades.
- Creaty Cord with a heart cam stopper offers an easy stop without swaying the cord.
- Twin shade systems are available for Loopless type, Drum type and Cord type shades.






Creaty Lineup

Loopless Type		Drum Type—Clutch	
Twin	Single	Twin One Chain	Single
			
Features For operation to the shade, use the grip on the front side for the front shade, and the grip on the back side for the back shade. Excellent operability, possible to raise the front and back shades at the simultaneous.	Features For operation to the shade, use the grip. For the shade rises by repeatedly pulling the grip down. For lowering the shade, pull the grip a little to release the clutch, automatically descends at a moderate speed.	Features A single chain adjusts the front and back of both screens. Easy and simple operation with one hand using the built-in Clutch. The built-in Speed Controller prevents the screen from swooping down.	Features Easy and simple operation with one hand using the built-in Clutch. The built-in Speed Controller prevents the screen from swooping down.
Allowable Size Width: 300–3,000 mm (12–118") Height: 480–3,000 mm (19–118") *Depending on the style. *If width is 390 mm (15") or less, height is up to 2,000 mm (79").	Allowable Size Width: 300–3,000 mm (12–118") Height: 480–3,000 mm (19–118") *Depending on the style. *If width is 390 mm (15") or less, height is up to 2,000 mm (79").	Allowable Size Width: 300–4,000 mm (12–158") Height: 480–4,000 mm (19–158") *Depending on the style. *If width is 390 mm (15") or less, height is up to 2,000 mm (79"). *If width is 400–660 mm (16–26"), height is up to 3,000 mm (118").	Allowable Size Width: 300–4,000 mm (12–158") Height: 480–4,000 mm (19–158") *Depending on the style. *If width is 390 mm (15") or less, height is up to 2,000 mm (79"). *If width is 400–660 mm (16–26"), height is up to 3,000 mm (118").
Maximum Shade Weight Up to 5.5 kg (12.1 lb) in total of 2 shades *Front shade is up to 3 kg (6.6 lb), back shade is up to 2.5 kg (5.5 lb), 5.5 kg (12.1 lb) in total.	Maximum Shade Weight 3 kg (6.6 lb) *Including sewing materials.	Maximum Shade Weight Up to 8 kg (18 lb) in total of 2 shades *Front and back shade, each one is up to 4 kg (9 lb).	Maximum Shade Weight 5 kg (11 lb) *Including sewing materials.
Allowable Style 	Allowable Style 	Allowable Style 	Allowable Style 
Refer to page 4–5 and page 14 for details	Refer to page 4–5 and page 14 for details	Refer to page 6–7 and page 15 for details	Refer to page 8 and page 16 for details

What is Loopless?


- No looped operation chain or cord. Safe for children.
- The screen opens and closes up and down to prevent pets from playing around.

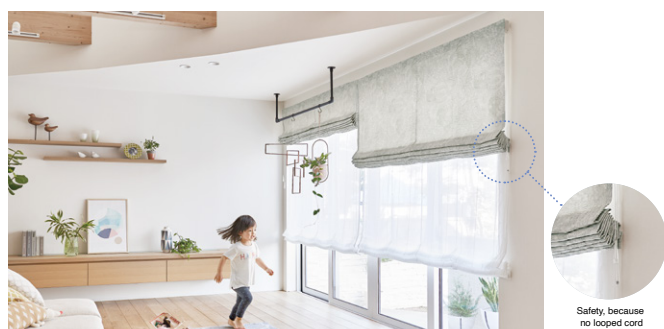

Drum Type—Gear	Cord Type	
Single	Twin	Single
		
Features Operates lightly with the built-in Gear. Lowering is simple: When the hand lowers the Ball Chain, the shade falls by the same distance. Suitable for big windows.	Features Suitable for narrow windows. Simple and smooth operability.	Features Suitable for narrow windows. Simple and smooth operability.
Allowable Size Width: 300–4,000 mm (12–158") Height: 480–4,000 mm (19–158") *Depending on the style. *If width is 390 mm (15") or less, height is up to 2,000 mm (79"). *If width is 400–660 mm (16–26"), height is up to 3,000 mm (118").	Allowable Size Width: 180–2,400 mm (7.1–94") Height: 480–3,000 mm (19–118")	Allowable Size Width: 180–2,400 mm (7.1–94") Height: 480–3,000 mm (19–118") *Depending on the style.
Maximum Shade Weight 8 kg (18 lb) *Including sewing materials.	Maximum Shade Weight Up to 8 kg (18 lb) in total of 2 shades *Either front or back shade is up to 5 kg (11 lb).	Maximum Shade Weight 5 kg (11 lb) *Including sewing materials.
Allowable Style  	Allowable Style  	Allowable Style  
Refer to page 8 and page 16 for details	Refer to page 11 and page 17 for details	Refer to page 11 and page 18 for details

What is Twin?

- A compact head rail with two shades fits neatly on the window frame and yet offers an easy operation.
- Two shades operate with only one Head Rail. A single unit for two shades reduces cost.

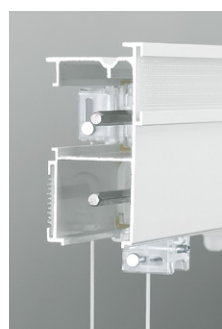

Allowable Products

- Creaty Drum Type Twin One Chain
- Creaty Cord Type Twin

Creaty's Unique Features

■ Creaty Loopless Type Twin / Single

- Minimal design. Simple and Smooth operation with one hand.

Pull the operating grip raises the screen by the same amount.

The operation is loopless without using a chain or cord. It is a compact and simple design.

Child
Safety



Creaty Loopless Type/Twin
Plain + Plain



Grip for Creaty Loopless Type
—simple design



Operation method
movie



Pull the operating grip raises the screen by the same amount.
For lowering the shade, pull the grip a little and descend automatically.

• Child Safety without looped chain or cord.

No looped operation chain or cord. Safe for children.


The screen opens and closes up and down to prevent pets from playing around.



Safety, because
no looped cord

• Operation Method

Twin

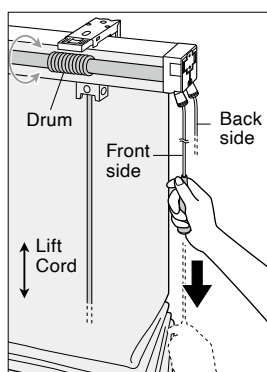

Operate the front shade with the grip on the front side and the back shade with the grip on the back side.


▲ For raising the shade

Pull the grip to raise the shade, and loosen the grip to stop. By pulling the grip repeatedly the shade will rise to the top.

▼ For lowering the shade

Pull the grip a little, the clutch will be released and it will automatically descend at a moderate speed. To stop in the middle, hold the grip again and pull it by 2 cm or more to make sure that the stop is applied and then release the grip.

Single

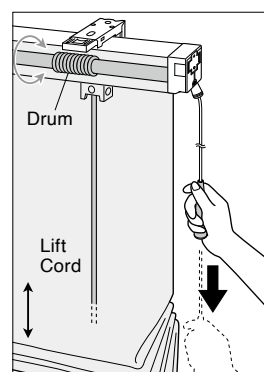

▲ For raising the shade

Pull the grip to raise the shade, and loosen the grip to stop. By pulling the grip repeatedly the shade will rise to the top.

▼ For lowering the shade

Pull the grip a little, the clutch will be released and it will automatically descend at a moderate speed. To stop in the middle, hold the grip again and pull it by 2 cm or more to make sure that the stop is applied and then release the grip.

Creaty's Unique Features

■ Creaty Drum Type Twin One Chain

• Achieve a smoother operability by the improvement of the Pulley

Adjusts easily with one hand for greater user comfort.

Moves more smoothly while lifting just as quietly and easily as before.

Benefits of Twin One Chain

- Even in a large window, easy and smooth operability in one hand.
- Lifting operation of the front and back Shades with one chain, easy-to-handle and excellent looking.



How to Pull up the Shade

Pull down the ball chain and release your hand at the position you want to stop the Shade.



How to Pull down the Shade


Pull down the ball chain about 2 cm again and release your hand, the Shade is lifted down to the bottom.

• One Chain Operation

Both the front shade and back shade can be raised and lowered by a single chain.




How to pull up the
Front Shade

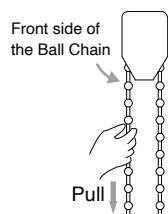

Pull down the front side
of the Ball Chain.




How to pull up the
Back Shade

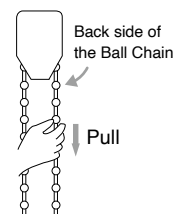

Pull down the back side
of the Ball Chain.




How to pull down the
Front Shade

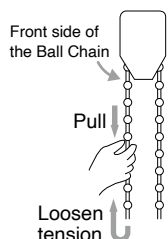

Pull down the front side
of the Ball Chain and
release it.

How to pull down the
Back Shade

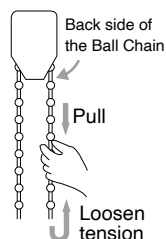


Pull down the back side
of the Ball Chain and
release it.


• Two-story Structure for Simple and Compact Design

The vertical placement of the front and back rails in a single unit greatly reduces depth.

The discreet gap between the window frame and shade relaxes the cramped feeling of a room.

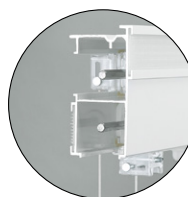

Two-story Structure Twin Head Rail

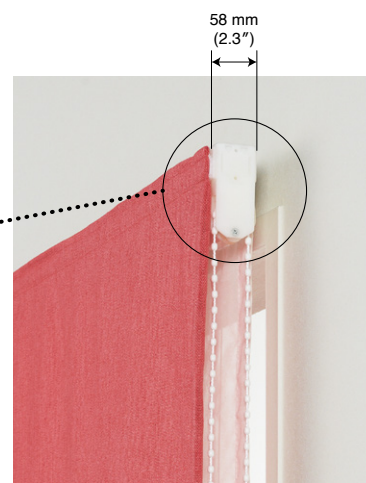

■ Creaty Drum Type / Single

• TOSO's Unique Single-Point Recoiling Drum

Enables a stable lift-cord reeling: taking up the lift cord at a single point without lateral swaying when lifting the screen.

Allows the screen to be neatly folded.


Creaty Drum Type **Clutch**



Single / White



Single / Brown

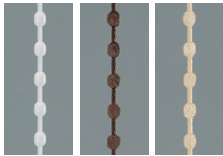

Ball Chain
Color Lineup


Creaty Drum Type **Gear**



Single / White



Single / Brown

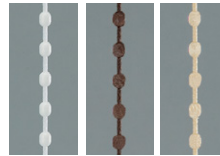

Ball Chain
Color Lineup



- Easy and simple operation with one hand functioning the built-in Clutch.
- The built-in Speed Controller prevents the screen from swooping down.
- A simple one-touch operation lowers the shade. The shade slowly lowers by itself to the lowest position.





- Operates lightly with the built-in Gear.
- Lowering is simple: When the hand lowers the Ball Chain, the shade falls by the same distance.

Single-point Coiling Drum (Creaty Loopless type and Drum type)



The Single-point Coiling Drum prevents entanglement when winding the Lift Cord.

As the shades move up and down, they do not move from side to side, so they move straight.

Creaty

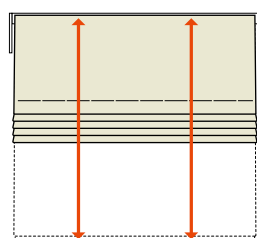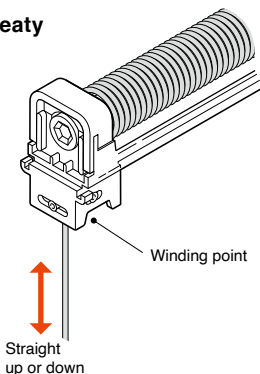

Other product

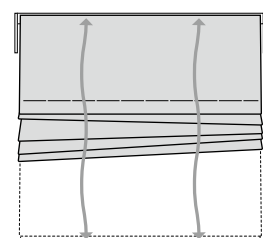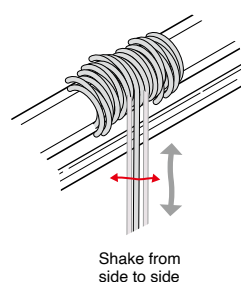

■ Creaty Cord Twin / Single

• Simple and Easy Operation

Quite operation with small power.

The screen stops at anywhere you want.

Even if you pull the cord from any angle, one-stop and one-release is possible.




Cord Type Single / White



Cord Type Twin / Brown


A heart cam stopper enables smooth raising and lowering of the shade.

Ordinary Roman Shades

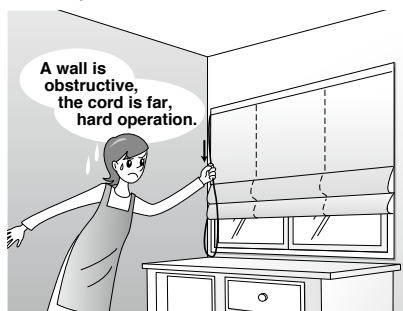

Ordinary Roman Shades require the cord to be pulled straight down for operation.

Creaty Cord

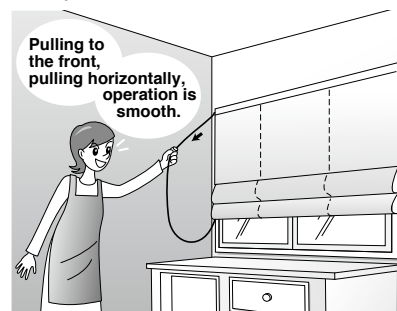

Creaty Cord's heart cam stopper makes it possible to pull the cord at any angle for stop and release operation.

Sewing Method and Components


• RS Cord Adjuster NS—Safety Type

The material is reinforced and can be washed with the parts attached.


The Cord Adjuster NS is separated, and the screen can be removed while the cord is wound.

There is no need to adjust the level of the screen when reattaching.


By changing the material at the bottom of the parts, the screen can be washed without removing the parts.

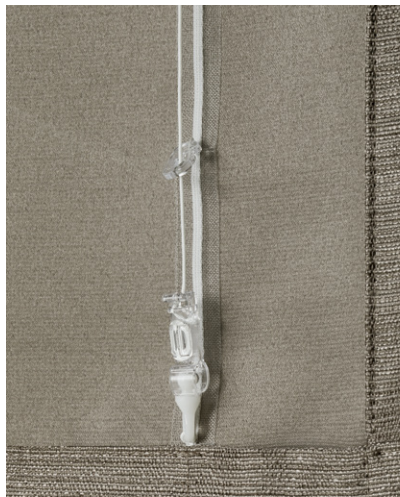

Cord Adjuster NS (safety type)

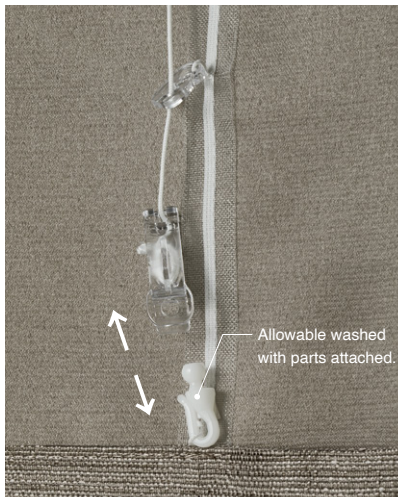

Remove the parts of Cord Adjuster NS.
Leave the white part at the bottom attached to the screen.

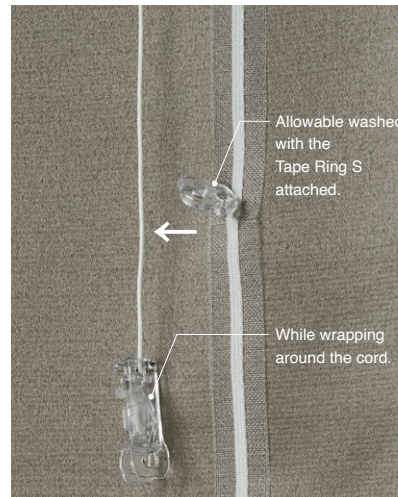

The cord can be removed from the groove of the Tape Ring S while wrapped around the Cord Adjuster NS. Allowable washed with parts attached.

• RS S-shaped Ring for Cord S

If a child's hand or head gets tangled in the cord, the cord detaches from the tape ring when force is applied.

Installation with RS Cord Adjuster S will further reduce danger.


Safety Type



• Cord Stop S

A safety mechanism in the upper part of the operation cord (circled) Cord Stop S will detach to eliminate danger when force is applied.

Safety Type

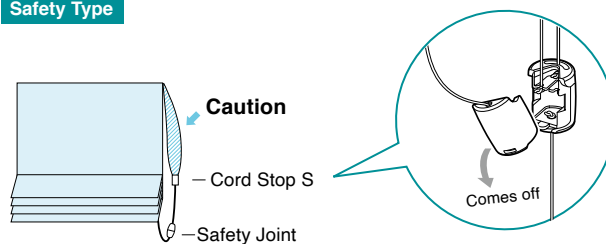

*Two pieces required for the Twin.







Optional Materials

• Head Rail Joint / Twin Head Rail Joint

Use the Head Rail Joint to easily carry large rails into a room in divided sections. Reassemble the sections in a few easy steps just before installing.

A Twin Head Rail Joint is also available.

The packing size is reduced to half that for large rails, for high portability.

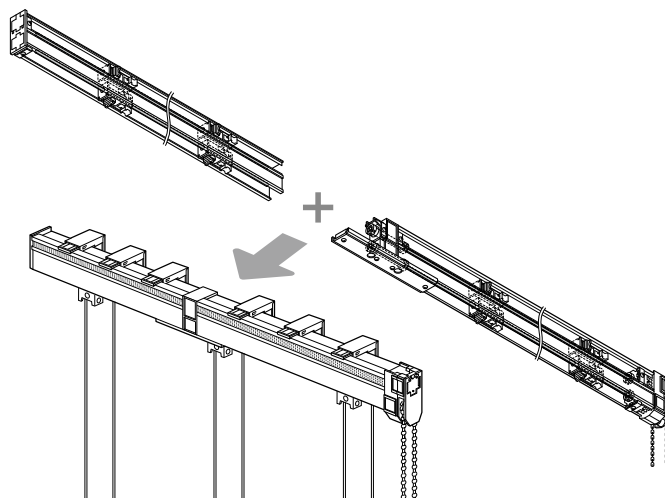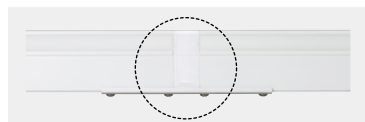

Allowable Size



Product Name	Width	Hight	Maximum Shade Weight (Including sewing materials)
Creaty Drum Type Twin One Chain	2,010– 4,000 mm (79–157")	480– 4,000 mm (19–157")	8 kg (17.6 lb)
Creaty Drum Type Gear			8 kg (17.6 lb)
Creaty Drum Type Clutch			5 kg (11 lb)




• Corner Return

Corner Return provides a useful function for twin shades in corner windows.

Corner Return widens the back side of the screen to block outside light by filling in the gap between the shades in the corners.

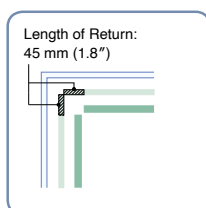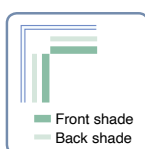

Front shade
Back shade

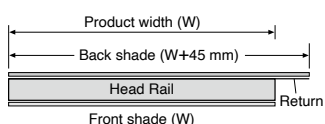

Corner Return is impossible to attach on the operating side.
Weight Bar length is the front or back Shade width.

• Corner Separate

One Roman Shade will also work in external or internal bay windows.
Possible simultaneous operation for the left and right both Roman Shade.

For internal bay window



By one unit at the corner window

For external bay window




Head Rail part









Bottom part

Structural Drawing

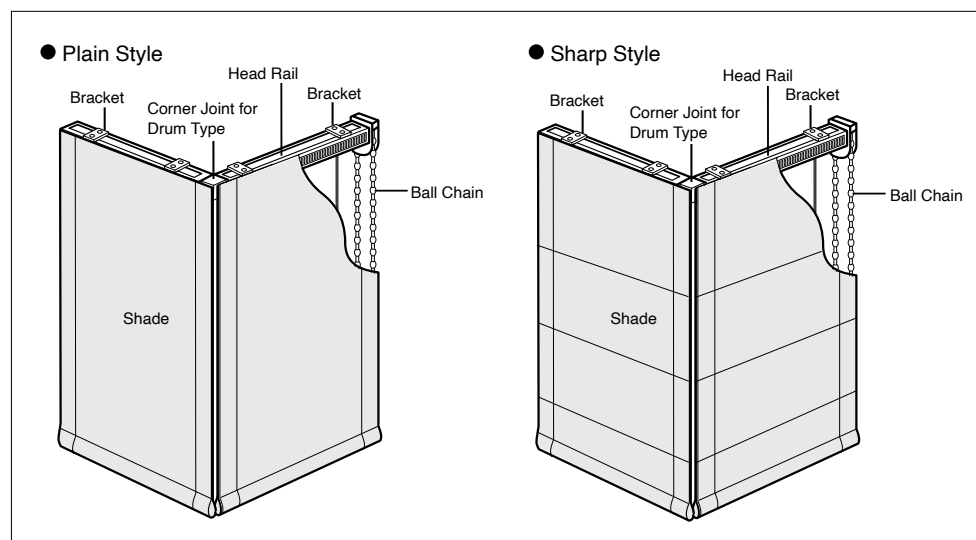

Ceiling attachment only.
Attachment at 90 degrees bending form for internal or external corner.

Measuring Method for Corner Windows

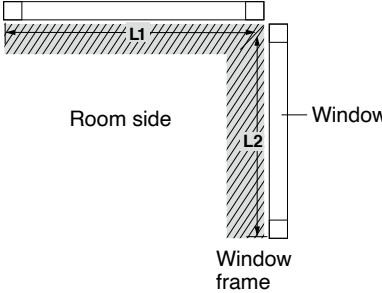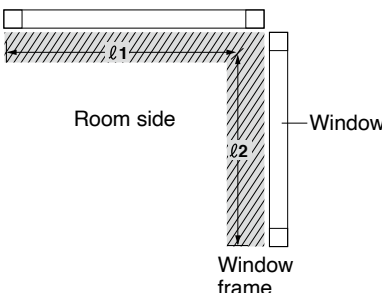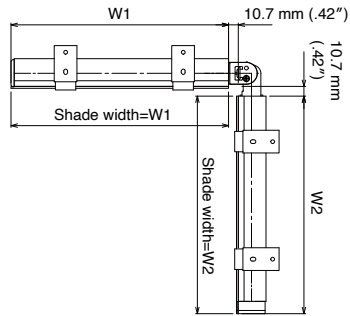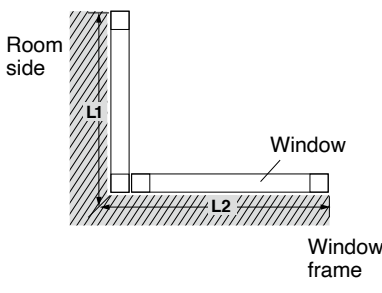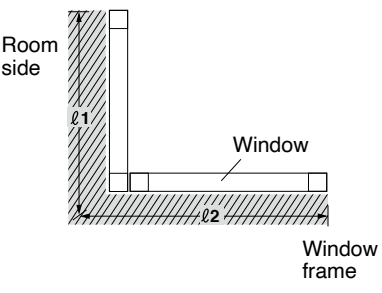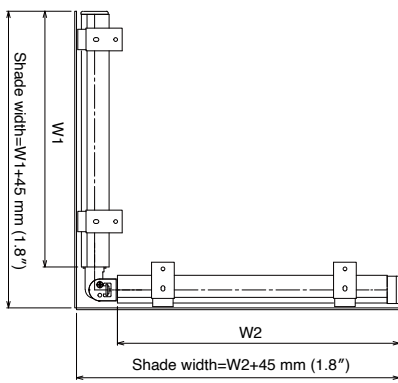	Attachment for the outside of the window frame	Attachment for the inside of the window frame	Installation Dimensions
Internal bay window	 Room side Window Window frame L1 L2	 Room side Window Window frame l1 l2	 W1 10.7 mm (.42") Shade width=W1 W2 Shade width=W2
External bay window	 Room side Window Window frame L1 L2 Take measurements from room side, left side is L1, right side is L2. Base point of measurement is rear position of the Bracket.	 Room side Window Window frame l1 l2 Take measurements from room side, left side is l1, right side is l2. Base point of measurement is front position of the Head Rail.	 W1 Shade width=W1+45 mm (1.8") W2 Shade width=W2+45 mm (1.8")

Allowable Size


Product Width			Product Height
Minimum size for one side	Minimum size for both sides	Maximum size for both sides	
300 mm (12")	600 mm (24")	4,000 mm (158")	480–4,000 mm (19–158")

Product height is less than 2,000 mm (79") for either product width is 390 mm (15") or less.

Product height is less than 3,000 mm (118") for either product width is 400–660 mm (16–26") or less.

Creaty Loopless Type Twin / Single


Product View and Parts Name

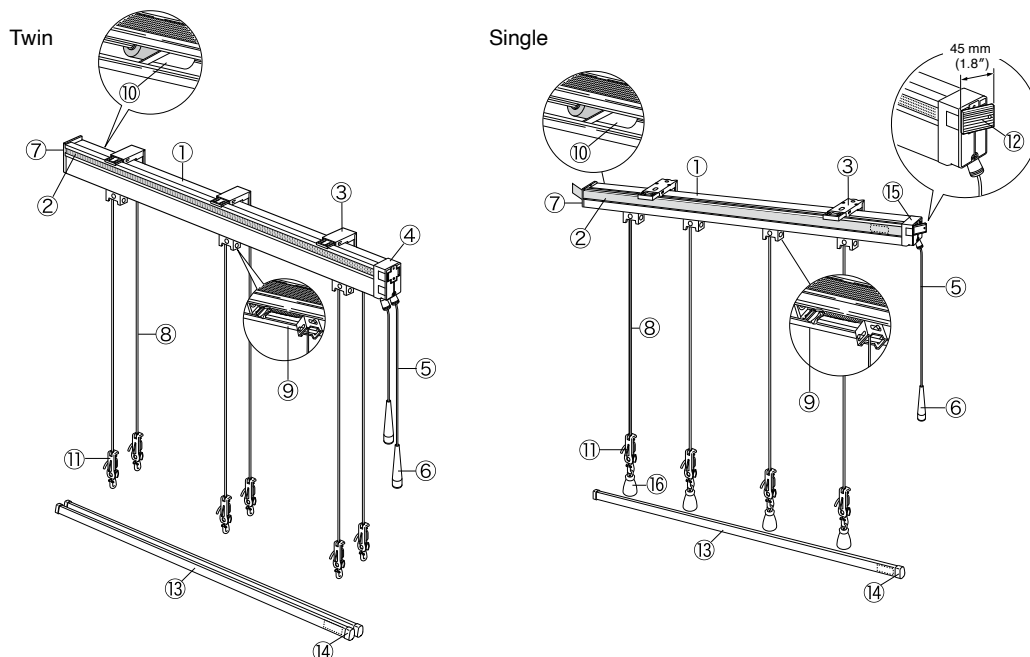

Parts

- | | |
|-------------------|--------------------------------|
| ① Head Rail | ⑨ Coiling Drum |
| ② Slide-in Velcro | ⑩ Speed Controller NS |
| ③ Bracket | ⑪ Cord Adjuster |
| ④ Twin Pulley | ⑫ Return (Only when specified) |
| ⑤ Cord | ⑬ Weight Bar |
| ⑥ Grip | ⑭ Weight Bar Cap |
| ⑦ End Cap | ⑮ Single Pulley |
| ⑧ Lift Cord | ⑯ Weight |

Brackets

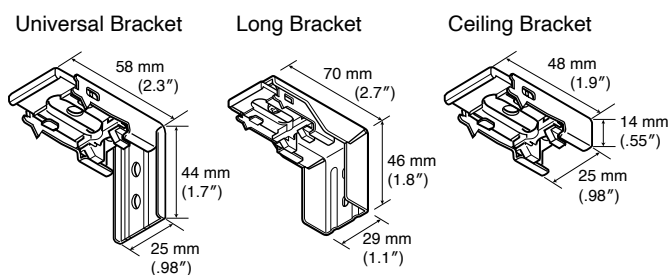

Maximum Shade Weight

Total 5.5 kg (12 lb)

Twin:

Front shade or back shade is 3 kg (6.6 lb) or less, and total weight is 2.5 kg (5.5 lb) or less. Including sewing materials.

Single:


3 kg (6.6 lb) or less. Including sewing materials.

Allowable Size


Product width (W)	300–390 mm (12–15")	400–3,000 mm (16–118")
Product height (H)		
480–2,000 mm (19–79")	○	○
2,010–3,000 mm (79–118")	—	○

Installation Dimensions


Wall attachment (With Universal Bracket)

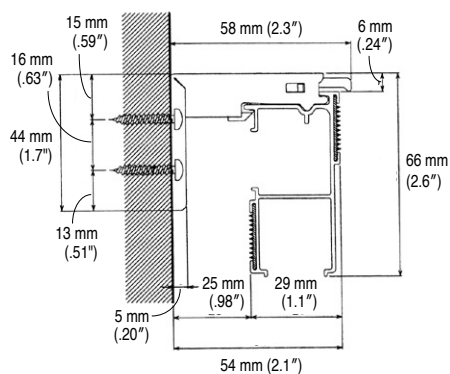

Ceiling attachment (With Universal Bracket)

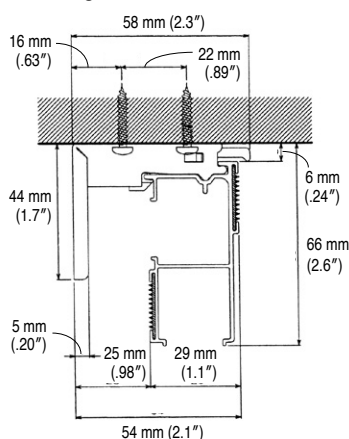


Ceiling attachment (With Ceiling Bracket)

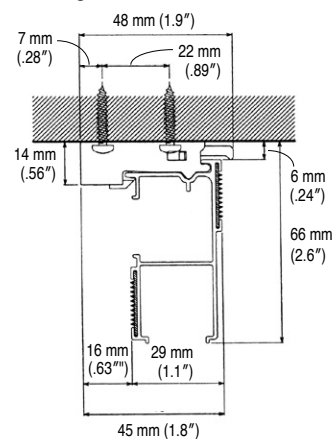

Creaty Drum Type Twin One Chain

Product View and Parts Name

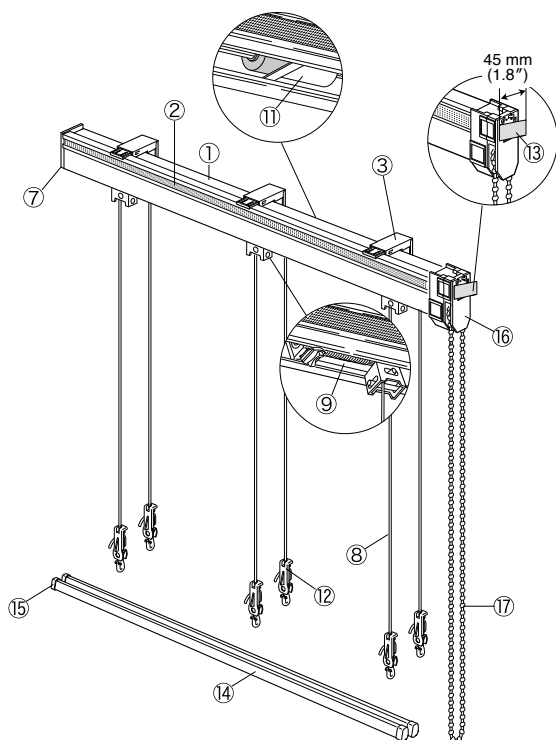


Parts


- | | |
|----------------------------|--------------------------------|
| ① Head Rail | ⑩ Clutch |
| ② Slide-in Velcro | ⑪ Speed Controller |
| ③ Bracket | ⑫ Cord Adjuster |
| ④ Pulley Set | ⑬ Return (Only when specified) |
| ⑤ Ball Chain | ⑭ Weight Bar |
| ⑥ Ball Chain Joint | ⑮ Weight Bar Cap |
| ⑦ End Cap | ⑯ One Chain Pulley Set |
| (One-sided operation only) | ⑰ Loop Ball Chain |
| ⑧ Lift Cord | |
| ⑨ Coiling Drum | |

Brackets


Universal Bracket

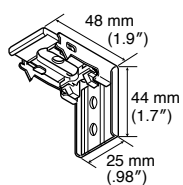

Long Bracket

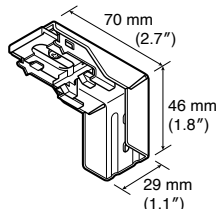

Ceiling Bracket

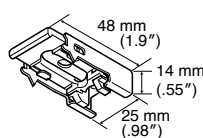

Allowable Size

Product width (W)	300–390 mm (12–15")	400–660 mm (16–26")	670–4,000 mm (26–158")
Product height (H)			
480–2,000 mm (19–79")	○	○	○
2,010–3,000 mm (79–118")	—	○	○
3,010–4,000 mm (119–158")	—	—	○


Maximum Shade Weight

Total 8 kg (18 lb)


Front shade or back shade is 4 kg (9 lb) or less, and total weight is 8 kg (18 lb) or less. Including sewing materials.

Installation Dimensions


Wall attachment (With Universal Bracket)

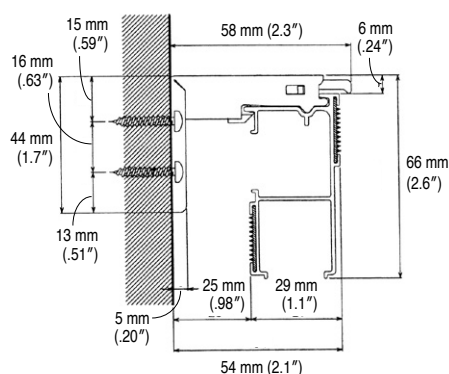

Ceiling attachment (With Universal Bracket)


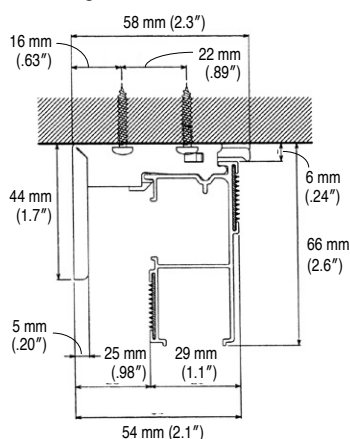


Ceiling attachment (With Ceiling Bracket)

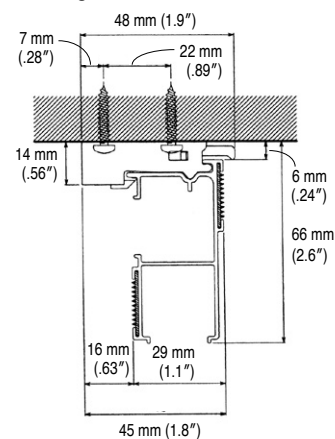

Creaty Drum Type Single / Creaty Drum Type Gear Single

Product View and Parts Name

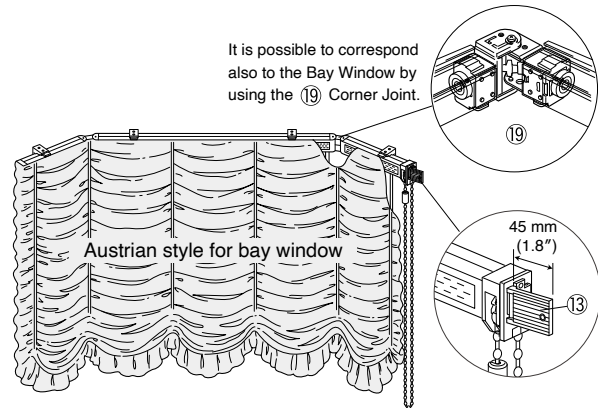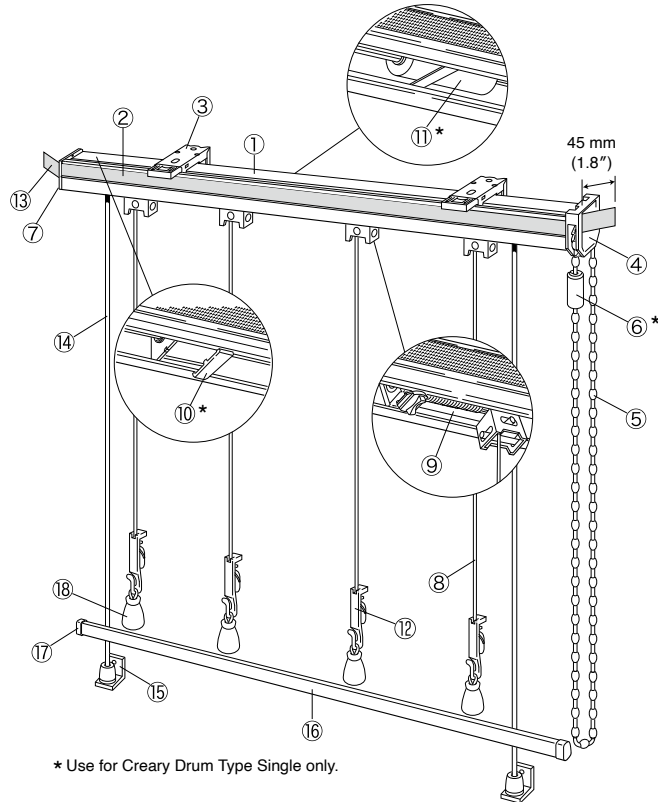


Parts


- | | |
|----------------------|------------------------------------|
| ① Head Rail | ⑪ Speed Controller * |
| ② Slide-in Velcro | ⑫ Cord Adjuster |
| ③ Bracket | ⑬ Return (Bay window styles) |
| ④ Pulley Set | ⑭ Guide Cord (Austrian) |
| ⑤ Ball Chain | ⑮ Guide Cord End (Austrian) |
| ⑥ Ball Chain Joint * | ⑯ Weight Bar (Plain, Sharp) |
| ⑦ End Cap | ⑰ Weight Bar Cap (Plain, Sharp) |
| ⑧ Lift Cord | ⑱ Weight (Balloon, Austrian) |
| ⑨ Coiling Drum | ⑲ Corner Joint (Bay window styles) |
| ⑩ Clutch * | |

Brackets


Universal Bracket

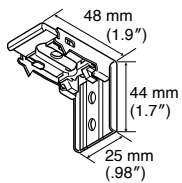

Long Bracket

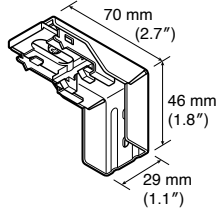

Ceiling Bracket

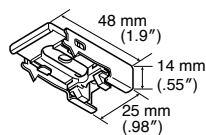

Maximum Shade Weight

Creaty Drum Single: 5 kg (11 lb)

Creaty Drum Gear Single: 8 kg (18 lb)

Including sewing materials.

Allowable Size


Product width (W)	300–390 mm (12–15")	400–660 mm (16–26")	670–4,000 mm (26–158")
Product height (H)			
480–2,000 mm (19–79")	○ (*1)	○	○
2,010–3,000 mm (79–118")	—	○	○
3,010–4,000 mm (119–158")	—	—	○ (*2)

*1 For Coiling Drum Short only. *2 For Coiling Drum Long only.

Allowable size for bay window


The number of multiple	Product width			Product height
	The min. width of one side	Total min. width of one side	Total max width	
2	300 mm (12")	700 mm (28")	4,000 mm (158")	480–3,000 mm (19–118")
3		1,210 mm (48")		
4				
5				

*Operation possible angle of Corner Joint is 90° to 180°.




Installation Dimensions


Wall attachment (With Universal Bracket)

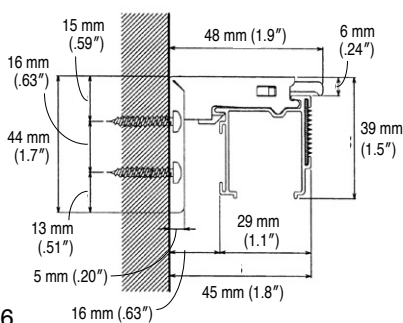

Ceiling attachment (With Universal Bracket)

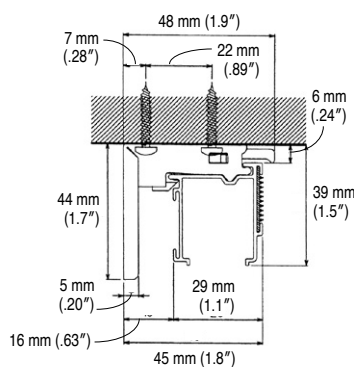


Ceiling attachment (With Ceiling Bracket)

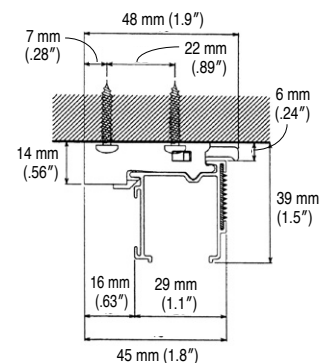


Creaty Cord Type Twin

Product View and Parts Name

One-sided operation

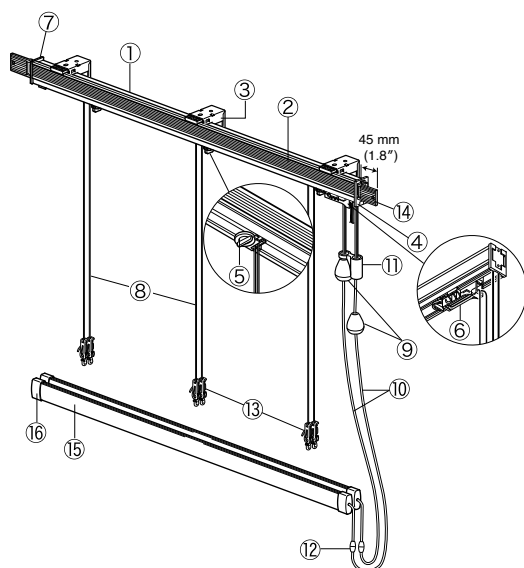

Two-sided operation

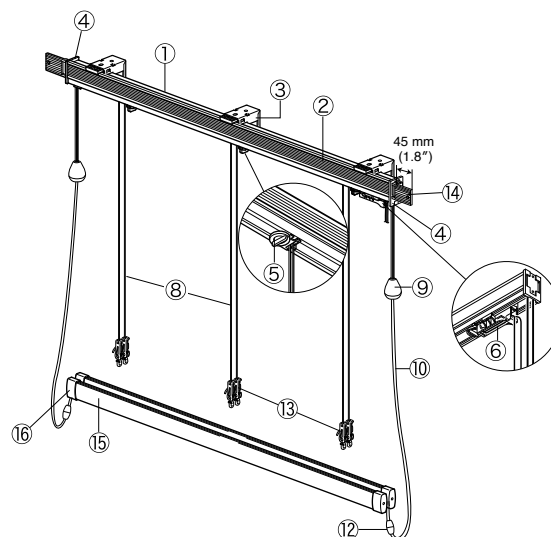


Parts


- | | | |
|--------------------------------------|---|--------------------------------|
| ① Head Rail | ⑦ End Cap (One-sided operation only) | ⑬ Cord Adjuster |
| ② Slide-in Velcro | ⑧ Lift Cord | ⑭ Return (Only when specified) |
| ③ Bracket | ⑨ Cord Stop | ⑮ Weight Bar |
| ④ Stopper Case (Main unit) | ⑩ Cord | ⑯ Weight Bar Cap |
| ⑤ Cord Guide (Cord Guide A/B) | ⑪ Cord Separator (One-sided operation only) | |
| ⑥ Stopper Guide (Width up to 290 mm) | ⑫ Safety Joint | |

Brackets


Universal Bracket

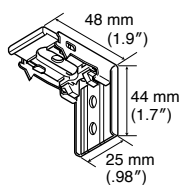

Long Bracket

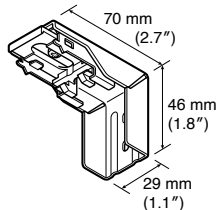

Ceiling Bracket

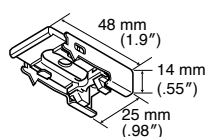

Maximum Shade Weight

Total 8 kg (18 lb)


Front shade or back shade is 5 kg (11 lb) or less, and total weight is 8 kg (18 lb) or less. Including sewing materials.

Allowable Size


Product width (W)	180 mm (7.1") to 2,400 mm (94")
Product height (H)	480 mm (19") to 3,000 mm (118")

Installation Dimensions


Wall attachment (With Universal Bracket)

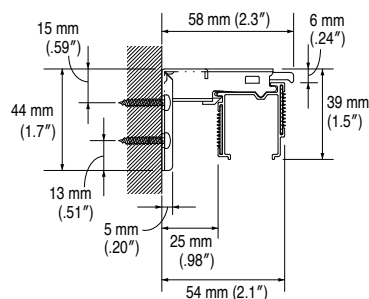

Ceiling attachment (With Universal Bracket)

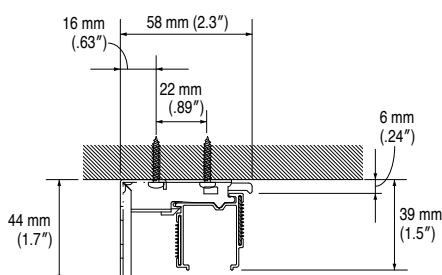


Ceiling attachment (With Ceiling Bracket)

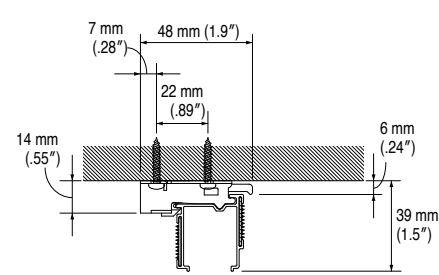

Creaty Cord Type Single

Product View and Parts Name

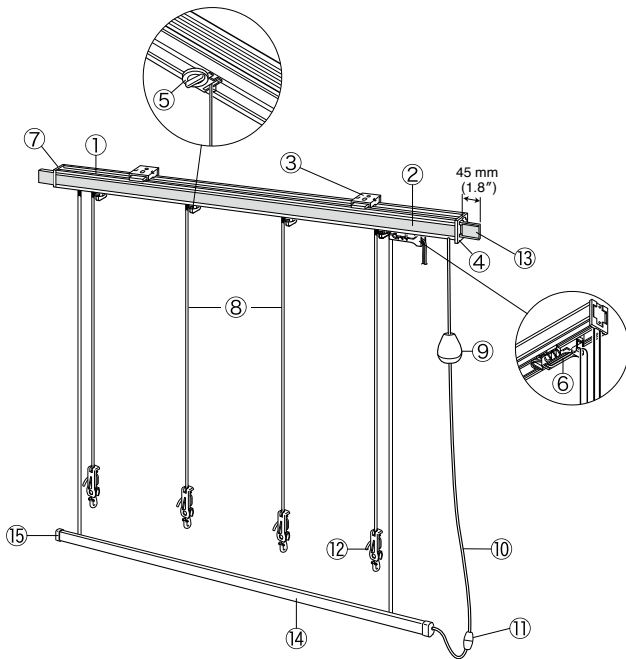


Parts


- ① Head Rail
- ② Slide-in Velcro
- ③ Bracket
- ④ Stopper Case (Main unit)
- ⑤ Cord Guide (Cord Guide A/B)
- ⑥ Stopper Guide (width up to 290 mm)
- ⑦ End Cap
- ⑧ Lift Cord
- ⑨ Cord Stop
- ⑩ Cord
- ⑪ Safety Joint
- ⑫ Cord Adjuster
- ⑬ Return (Only when specified)
- ⑭ Weight Bar
- ⑮ Weight Bar Cap

Brackets


Universal Bracket

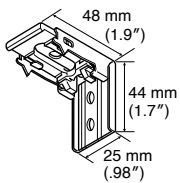

Long Bracket

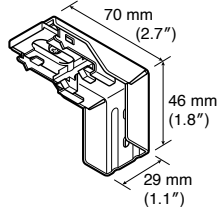

Ceiling Bracket

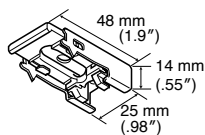


Allowable Size

Product width (W)	180 mm (7.1") to 2,400 mm (94")
Product height (H)	480 mm (19") to 3,000 mm (118")

Allowable size for bay window

The number of multiple	Product width			Product height
	The min. width of one side	Total min. width of one side	Total max width	
2	150 mm (5.9")	700 mm (28")	2,350 mm (93")	480-3,000 mm (19-118")
3		1,010 mm (40")		

*Operation possible angle of Corner Joint is 90° to 180°.




Maximum Shade Weight

5 kg (11 lb)


Including sewing materials.

Installation Dimensions


Wall attachment (With Universal Bracket)

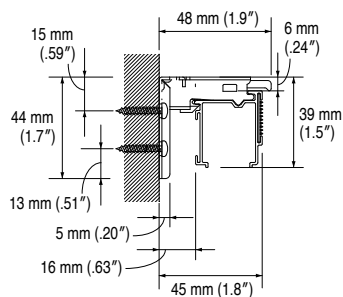








Ceiling attachment (With Universal Bracket)










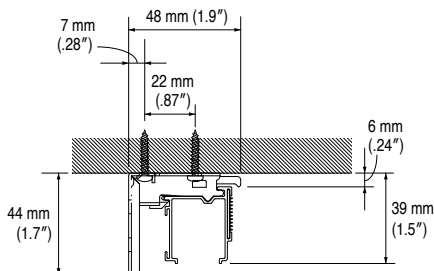












Ceiling attachment (With Ceiling Bracket)





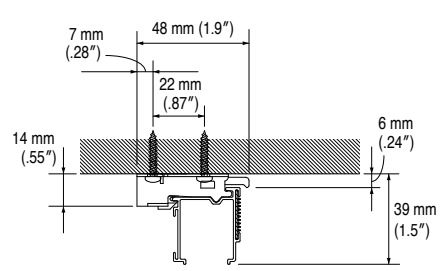


Creaty Parts

Product Name			Loopless Type		Drum Type			Cord Type		Product Code	
			Twin	Single	Clutch		Gear	Twin	Single		
					Twin One Chain	Single	Single				
Head Rail (4 m) 	White	—	○	—	○	○	○	○	04610001		
	Brown	—	○	—	○	○	○	○	30000995		
Head Rail Joint 			—	○	—	○	○	—	—	30007484	
Drum Twin Head Rail (4 m) 	White	○	—	○	—	—	—	—	04620001		
	Brown	○	—	○	—	—	—	—	30000996		
Twin Head Rail Joint 			○	—	○	—	—	—	—	30007483	
Hook and Loop Fastener (Hook Side) Slide-in Type (50 m) 			○	○	○	○	○	○	○	30020847	
Universal Bracket 	White	—	○	—	○	○	—	○	04610002		
	Brown	—	○	—	○	○	—	○	30001003		
Long Bracket 	White	○	—	○	—	—	○	—	30014249		
Ceiling Bracket 	White	○	○	○	○	○	○	○	04610003		
	Brown	○	○	○	○	○	○	○	30001004		
Twin Universal Bracket 	White	○	—	○	—	—	○	—	04620002		
	Brown	○	—	○	—	—	○	—	30001002		
End Cap 	White	—	○	—	○	○	○	○	04610004		
	Brown	—	○	—	○	○	○	○	30000997		
Drum Twin End Cap 	White	○	—	○	—	—	—	—	04620016		
	Brown	○	—	○	—	—	—	—	30001005		
RS Ball Chain TO-0748 			White	—	—	—	○	—	—	04610016	
			Beige	—	—	—	○	—	—	—	30001009
			Brown	—	—	—	○	—	—	—	30001008
RS Loop Ball Chain TO-0748 	L=1000 mm	White	—	—	○	—	○	—	—	04610045	
		Beige	—	—	○	—	○	—	—	30001073	
		Brown	—	—	○	—	○	—	—	30001069	
	L=1500 mm	White	—	—	○	—	○	—	—	04610046	
		Beige	—	—	○	—	○	—	—	30001074	
		Brown	—	—	○	—	○	—	—	30001070	
	L=2000 mm	White	—	—	○	—	○	—	—	04610047	
		Beige	—	—	○	—	○	—	—	30001075	
		Brown	—	—	○	—	○	—	—	30001071	
	L=2500 mm	White	—	—	○	—	○	—	—	04610048	
		Beige	—	—	○	—	○	—	—	30001076	
		Brown	—	—	○	—	○	—	—	30001072	
Ball Chain Joint 			White	—	—	—	○	—	—	04610017	
			Beige	—	—	—	○	—	—	—	04610036
			Brown	—	—	—	○	—	—	—	04610037

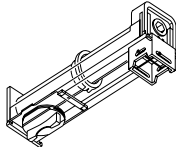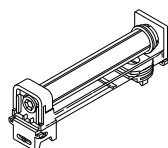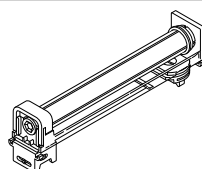Product Name		Loopless Type		Drum Type			Cord Type		Product Code		
		Twin	Single	Clutch		Gear	Twin	Single			
				Twin One Chain	Single	Single					
Clutch		—	—	—	○	—	—	—	04610040		
Coiling Drum		○	○	○	○	○	—	—	04610006		
Coiling Drum Short		○	○	○	○	○	—	—	04610044		
Coiling Drum Long		○	○	○	○	○	—	—	30003588		
Corner Joint for Drum Type		Right	—	○	—	○	○	—	—	04610008	
		Left	—	○	—	○	○	—	—	04610009	
Pulley		White	—	—	—	○	—	—	—	04610005	
		Brown	—	—	—	○	—	—	—	30000998	
Loopless Twin Pulley		Right	White	○	—	—	—	—	—	30016460	
			Brown	○	—	—	—	—	—	—	30016462
		Left	White	○	—	—	—	—	—	—	30016461
			Brown	○	—	—	—	—	—	—	30016463
Loopless Single Pulley		Right	White	—	○	—	—	—	—	30016456	
			Brown	—	○	—	—	—	—	—	30016458
		Left	White	—	○	—	—	—	—	—	30016457
			Brown	—	○	—	—	—	—	—	30016459
Pulley 2		Right	White	—	—	—	○	—	—	30009755	
			Brown	—	—	—	○	—	—	—	30009757
		Left	White	—	—	—	○	—	—	—	30009756
			Brown	—	—	—	○	—	—	—	30009758
Gear Type Pulley		White	—	—	—	—	○	—	—	30005344	
		Brown	—	—	—	—	—	○	—	—	30005345

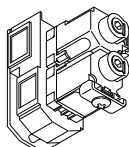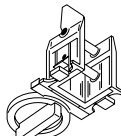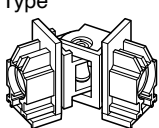Product Name			Loopless Type		Drum Type			Cord Type		Product Code
			Twin	Single	Clutch		Gear	Twin	Single	
					Twin One Chain	Single	Single			
Drum Twin One Chain Pulley 	Right	White	—	—	○	—	—	—	—	30008423
		Brown	—	—	○	—	—	—	—	30008425
	Left	White	—	—	○	—	—	—	—	30008424
		Brown	—	—	○	—	—	—	—	30008426
Return 45 mm 			—	○	○	○	○	○	○	04610011
Adjustable Return 70–110 mm 			—	○	○	○	○	○	○	04610012
Shaft 	3 m	Steel	○	○	○	○	○	—	—	04610018
	4 m	Steel	○	○	○	○	○	—	—	04610041
Speed Controller N 			○	○	○	○	—	—	—	30001920
Speed Controller N (Heavy duty) 			○	○	○	○	—	—	—	30001938
(*1)										
Cord Stopper 			—	—	—	—	—	○	○	04750002
Stopper Case 	White	—	—	—	—	—	—	○	○	04750004
	Brown	—	—	—	—	—	—	○	○	30001001
Cord Guide 			—	—	—	—	—	○	○	04750006
Cord Separator 			—	—	—	—	—	○	—	04750008
Corner Joint for Cord Type 	Right	—	—	—	—	—	—	—	○	04750010
	Left	—	—	—	—	—	—	—	○	04750012
Stopper Guide 			—	—	—	—	—	○	○	04750014
(*2)										






Product Name		Loopless Type		Drum Type			Cord Type		Product Code
		Twin	Single	Clutch		Gear	Twin	Single	
				Twin One Chain	Single	Single			
Lift Cord (1.2 mm) TO-0712 	White	○	○	○	○	○	○	○	01320275
	Beige	○	○	○	○	○	○	○	01320276
	Brown	○	○	○	○	○	○	○	01320277
	Gray	○	○	○	○	○	○	○	01320278
Loopless Operation Cord 1.8 	White	○	○	—	—	—	—	—	30017172
	Brown	○	○	—	—	—	—	—	30017173
RS Cord 2.8 mm 	White	—	—	—	—	—	○	○	01320231
	Beige	—	—	—	—	—	○	○	01320232
	Brown	—	—	—	—	—	○	○	01320234
	Gray	—	—	—	—	—	○	○	01320233
Loopless Grip (Clear) 		○	○	—	—	—	—	—	30016469
Loopless Cord Stop (Clear) 		○	○	—	—	—	—	—	30016470
Loopless Cord Stop (Black) 		○	—	—	—	—	—	—	30016471
Cord Stop S 		—	—	—	—	—	○	○	30007495
RS Cord Stop N 	White	—	—	—	—	—	○	○	01320283
	Beige	—	—	—	—	—	○	○	01320285
	Brown	—	—	—	—	—	○	○	01320287
	Gray	—	—	—	—	—	○	○	01320289
RS Cord Stop Washer (*3) 		—	—	—	—	—	○	○	01320291
Creaty Cord Safety Joint (Large) 		—	—	—	—	—	○	○	30008427
RS Keeper Plate 		—	—	○	—	—	—	—	01320294
RS Weight Bar 250 4000 mm (*2) 		○	○	○	○	○	○	○	01710022
Weight Bar Joint 		○	○	○	○	○	—	—	30007485
RS Weight Bar Cap 25 		○	○	○	○	○	○	○	01710023
RS Weight Flat Bar 2000 mm 		○	○	○	○	—	○	—	01320253
RS Weight Steel Bar L300 		○	—	○	—	—	—	—	01320293
RS Weight Steel Bar L120 (*2) 		○	—	○	—	—	○	○	01320295

*1 Using for product width 1,410 mm (56") over.

*2 Using for product width at 180 mm (7.1") to 290 mm (11.4").

*3 Using for one swag.

Sewing and Optional Materials

Product Name	Style					Example of use amount	Product Code
	Plain + Plain	Plain	Sharp	Balloon	Austrian		
RS Tape with Loop 200 mm pitch (100 m) 	☐	☐	—	—	—	(Product height +100 mm) X (Number of swag +1) (*1)	01320261
RS Tape with Loop 150 mm pitch (100 m) 	☐	☐	—	☐	☐	(Product height +100 mm) X (Number of swag +1) (*1)	01320109
RS S-Shaped Ring for Cord N 	☐	☐	—	☐	☐	Installation on RS Tape with Loop	01320273
RS S-Shaped Ring for Cord S 	☐	☐	☐	☐	—	Installation on RS Tape with Loop	30007032
Gather Tape DWI 75 (50 m) 	—	—	—	☐	—	Same length of the shade width	02020002
Polyester Heading 75 mm (100 m) 	—	—	—	☐	—	Same length of the shade width	00400064
RS Cord Adjuster R 	☐	☐	☐	☐	☐	Number of swag +1 (*1)	30007112
RS Cord Adjuster NS 	☐	☐	☐	☐	—	Number of swag +1 (*1)	30015982
Hook and Loop Fastener (25 m) 	☐	☐	☐	☐	☐	Same length of the shade width	01320108
RS Shaper Tape (50 m) 	White	—	—	—	—	Same length of the shade width	01320201
	Beige	—	—	—	—		01320198
	Brown	—	—	—	—		01320199
	Gray	—	—	—	—		01320200
RS Shaper Tape S 	White	—	—	—	—	Same length of the shade width	30007034
	Beige	—	—	—	—		30007035
	Brown	—	—	—	—		30007036
	Gray	—	—	—	—		30007037
RS Shaper Rod 4000 mm 	—	—	☐	—	—	Same length of the shade width	01320113
RS Twin Rings 	☐ (*2)	—	—	—	—	Number of swag +1	01320213

*1 In the case of Plain + Plain, the required number doubles.

*2 It is necessary only for Creaty Cord.

