TOSO

Legato Uni




- •Seamless design that blends in with any space.
- •Compatible with Smart Wave Curtain System, Invisible Pitch Keeper Tape that can create beautiful curtain waves.
- •Matte texture with monochromatic color variation suitable for simple and modern space.
- •The ability to select from a wide variety of End Caps and combine them with optional parts significantly enhances design flexibility and functionality.

Legato Uni

Legato Uni's Unique Feature

Smooth and quiet rollers

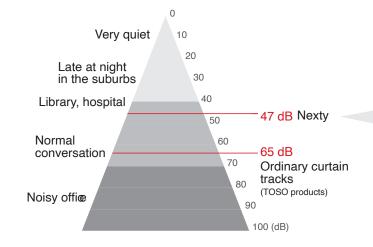

The key advanced roller (function

Noiseless Wheel-type Roller

Reduces the noise when opening and closing the curtain.


Nexty Rollers give beautiful expression to curtain folds



Freely revolving eye bolts allow curtain folds to neatly settle into each other.

Smart Wave Curtain System

The Smart Wave brings out the feeling of naturally fabric.

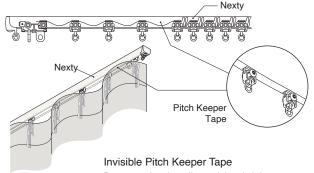


By connecting the roller and the pitch keeper tape, it can create a beautiful curtain wave. The pitch keeper tape fits inside the track for a clean look.

Curtain Stopper (Option)



Side Magnet Carrier (Option)

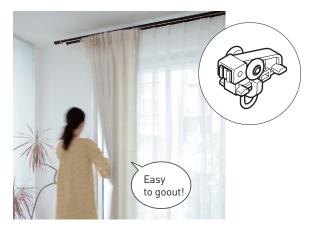

Multi-magnet function (optional) allows you to open and close the curtain from both sides of the rail. Even floor height windows allow people to enter and exit smoothly.

*Purchase the Side Magnet Carrier separately.

Intermediate Stop (Option)




By setting the Intermediate Stop in the desired position, possible to freely style the curtains.

Curtains can be fixed in the desired position with one rail. The side by side windows fit neatly with just one rail. You can either keep the curtains in place or use magnet rollers to open and close curtains. Easy to install as it is an add-on option.

LT Double Bracket



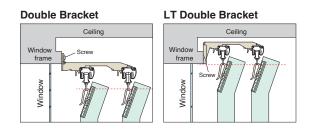


This bracket hangs the curtain higher than regular brackets. Because the top of the curtain is positioned higher than usual, very little light filters into the room.


A screw hole is provided on the bottom of the bracket to enable easy installation on a window frame close to the ceiling.


NT Double Bracket

Double Bracket



NT Double Bracket





NT Double Bracket is suitable for the narrow space or in the case to be attached to the window frame, because the screw can be fixed just beside the Bracket body. Moreover, the curtain hanging position is up, reduce the light leaking.

Ceiling Double Bracket with Spacer




In the case of a small window on a small wall or a tall window, using a ceiling bracket and special spacer to attach it perfectly against the ceiling.

Hang curtains from the ceiling to create the illusion of high ceilings.

*Attach the rail first and then attach the cap.

Cover Top II (Option)

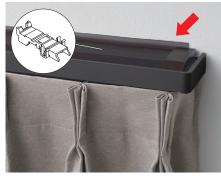

Easy to install with fixing clips.



nite Dark brown

White

Color Combination

Legato Uni	Nexty	Cover Top II
White	Plain White	White
Gray	Gray	Dark brown
Black	Black	Dark brown

Reduces light leakage and increases energy saving effects





*It has no complete blackout effect.

Installing the Cover Top II stops air flow and external light from above curtains and helps to lower heating and cooling bills. Covers come in either white or dark brown. Installing a Cover Top II greatly reduces the amount of external light leaking in over the top and from around the sides of curtains.

*Cover Top II does not block all external light.

By using the Cover Top II Joint, it can also be used with rails over 3.00 m.

For wide window rails, two Cover Top II units can be connected together.



Seamless End Cap Design



The joint between the cap and rail is rounded to create a beautiful, integrated look.


Refined Rail Design



The front of the rail has a matte film finish. The rail body is also the same color as the front of the rail.

4

Legato Uni

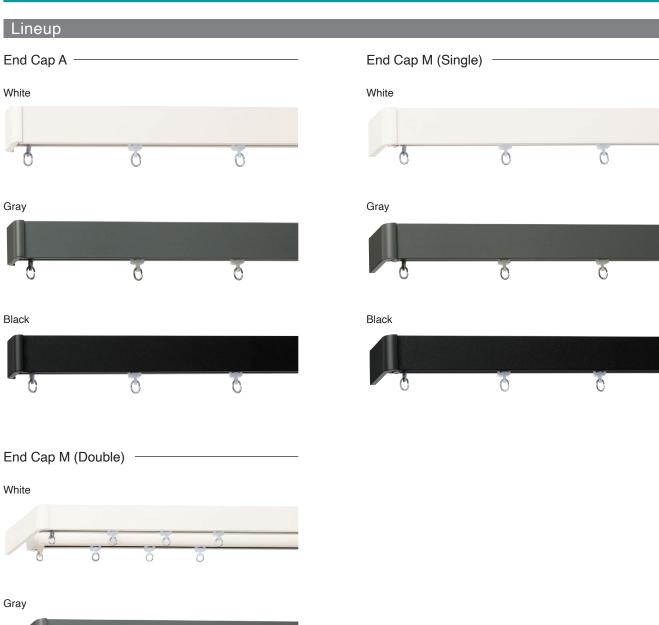




Black



Materials and Finishes

Parts	Material	Finish	Par	ts	Material	Finish
	Olefin resin coating film wrapping: Aluminum alloy White, Gray,		Bracket	Body	Steel	Plain White, Gray, Black
Rail 1		Vinyl Chloride Resin coating film wrapping: Black	Dracket	Hook	Polyacetal	
End Cap A	Alminum die casting			Plate	Hard polyethylene	
	A Annihum die casing White, dray, black		Roller	Wheel	Polyester elastomer	
End Cap M	Alminum die casting	White, Gray, Black		Oval ring	Stainless steel	
		·				
				Body	Polystyrene resin	White, Dark brown
			Cover Top II	Сар	Polystyrene resin	White, Dark brown

Bracket Installation Interval and Allowable Curtain Load

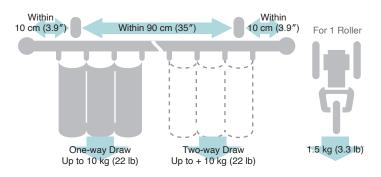


Fixing clip

Acetal resin

Installation and Cap Dimensions

Wall Attachment

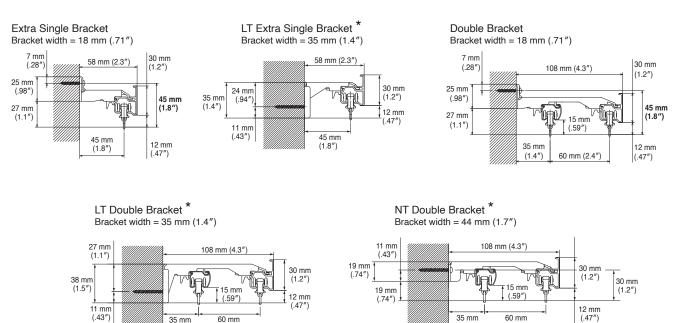


* For attach it to the ceiling, keep the ceiling and the top of the bracket at least 10 mm apart.

35 mm (1.4")

60 mm (2.4")


Ceiling Attachment

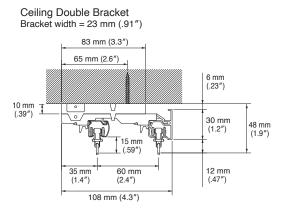

60 mm (2.4")


35 mm (1.4")

Legato Uni

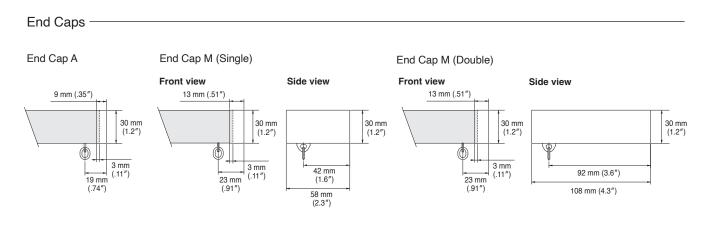


End Cap M Installation Dimensions

End Cap M (Single)

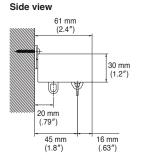

End Cap M (Double)

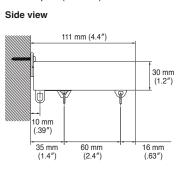


Legato Uni Rails



Legato Uni Rails

	Size	Product Code					
	3120	White	Gray	Black			
nm	1.13 m (44″)	30018451	30018486	30018521			
")	2.03 m (80″)	30018452	30018487	30018522			
	3.03 m (119″)	30018453	30018488	30018523			
	4.03 m (159″)	30018454	30018489	30018524			

Nexty Rails




Size	Product Code				
5120	Plain White	Gray	Black		
2.00 m (79")	03570537	30018557	03500020		
3.00 m (118″)	03570539	30018559	03570158		
4.00 (158")	03570541	30018560	03570160		


*For the rail of the window side, Nexty is used.

Cover Top II (Option)


Product View

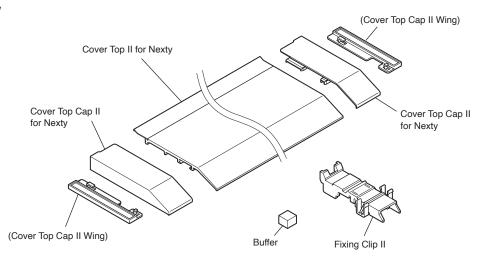


Main Body Side View



• Cap Side View



• Top View

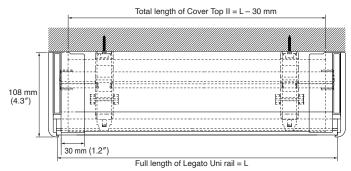

Cut dimensions when using Cover Top II Joint = (L \div 2) – 20 mm


Legato Uni Cover Top II Set

Size	Product Code			
5120	White	Dark brown		
2.00 m (79″)	30009110	30009112		
3.00 m (118″)	30009116	30009118		


*Set Contents Cover Top II (1 piece), Cover Top Fixing Clip II (2.03m/79" or less = 3 pieces, 2.04m/80" – 3.03m/119" = 5 pieces), Cap II (1 pair)

*Length of the cover top is 30 mm (1.18") shorter than the Legato Uni Rail.

Cap Bottom View



Installation dimension

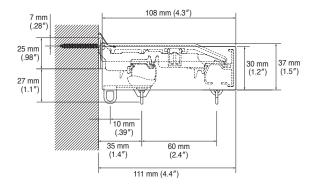

Legato Uni Parts

	Product Name		Product Code		Product Name		Product Code		
	End Cap A	White	30018455		Nexty Extra Single Bracket	Plain White	03572476		Sp
		Gray	30018490			Gray	30018571		
		Black	30018525		*	Black	03572486		Ne
s	End Cap M (Single)	White	30018456		Nexty Double Bracket	Plain White	03570584		
End Caps		Gray	30018491		State That	Gray	30018573		Ne
	C'S)	Black	30018526		Ψ	Black	03500106		
	End Cap M (Double)	White	30018457		Nexty LT Double Bracket	Plain White	30004723		
		Gray	30018492		A TRACK	Gray	30018575		Re
	and a second sec	Black	30018527	Brackets		Black	30004730	Other Parts	
	Nexty Roller (8 pieces per strip)	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	03572457	Brac	Nexty NT Double Bracket	Plain White	30009030	Other	Ne Ca
		2000 ·	03572457		P F B	Gray	30018576		
	Nexty MG Carrier	Do			Y	Black	30009038		
			03570037		Nexty Ceiling Double Bracket	Plain White	03570590		Co
Rollers	Nexty One-way MG Ca	arrier				Gray	30018578		
	, ,		03570038		~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	Black	03570184		
		go 			Nexty Ceiling Double I Spacer	Bracket			Co
	Nexty Side MG Carrier		30000993		- Alert		30013663		
				_			L		

Product Name Product Code Splice 05130016 Ņ lexty Intermediate Stop 30009041 a lexty Curtain Stopper Ś 03570006 1 Return Aids for End Cap N 30003078 6 - So lexty Cover Top White 30009128 Cap II Dark 30009130 brown Cover Top Fixation Clip II 30010764 Cover Top II Joint White 30013672 Dark 30013675 brown


Smart Wave Curtain System Dedicated Parts

	Product Name	Product Code		Product Name	Product Code
	Smart Wave Roller	30018621		Invisible Pitch Keeper Tape 80 (15 m)	30018624
Rollers	Smart Wave MG Carrier	30018622	Other Parts	Invisible Pitch Keeper Tape 80 (50 m)	30018625
	Smart Wave One-way MG Carrier	30018623		Invisible Pitch Keeper Tape 60 (50 m)	30019302


Curtain Wand


To keep the Wave Style, the Legato Uni is available with a Curtain Wand that attaches to the leading MG Slider. It is easy to operate high curtains and thick/heavy curtains, and prevents stains and wrinkles because the curtain fabric is not directly touched.

Curtain Wand / White (steel)

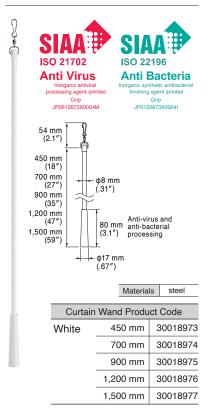

Curtain Wand / Gray (rope type)

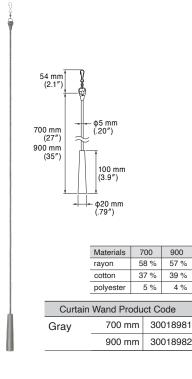

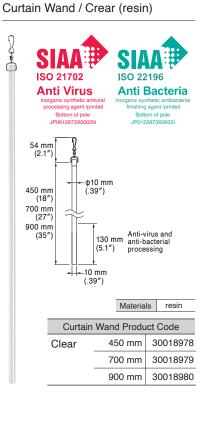

How to Use the Curtain Wand

Curtain Wand White and Clear are SIAA safety standards compliant for antiviral performance. It reduces the number of specific viruses on the product.

The SIAA mark is displayed on products that have been evaluated according to the ISO 21702 and ISO 22196 methods, and whose quality control and information have been disclosed under the Antimicrobial Product Technology Council quidelines.


Anti-virus processing

- •This product is not a pharmaceutical product.
- It uses antiviral materials that meet the safety standards of SIAA.
- •This product conforms to SIAA safety standards.
- Antiviral processing is not intended to treat or prevent diseases.


Antibacterial processing

- •This product is not a pharmaceutical product.
- It does not inhibit the growth of all bacteria.
- •This product uses antimicrobial materials that meet SIAA safety

standards.



How to Install



Hook the fittings of the Curtain Wand to the oval ring of the MG Carrier. *If the MG Carrier has two oval rings, hook the Curtainhook to the first oval ring and the fittings of the Curtain Wand to the

second oval ring.

Approximate **Curtain Wand Length**

Rail height position	2,200 -2,400 mm	2,000 -2,200 mm
Wand length	900 mm	700 mm

*In case used by a person with a height of 155 cm



