

New Delac

with Wave Style Components



- The Wave Style brings out the feeling of naturally fabric.
- Wheel type Rollers achieve super smooth operation.
- Exceptional durability satisfying the strict demands of a 10,000 open/close test.

New Delac with Wave Style Components

Wave Style Components' Unique Features



- The Wave Style creates a feeling of naturally flowing fabric.
- The curtains are draped in gentle waves about 1.5 times the width of window, resulting in a continuity of pattern and texture.
- There is a natural wave in the curtains at intervals of 80 mm (3.2").
- With its tape and accessories, it creates natural, elegant symmetrical waves.


*Pleating cord keeps waves evenly shaped, making the curtain rich and stylish.

Wave Style Structure

- Even number of hooks used in all cases.
- Rollers spaced at 80 mm (3.2") intervals to produce waves.
- Both left and right sides of curtains always end in troughs.


*To make appealing wave style curtains, use Flat Tape and Pleating Cord.

*Fabrics with soft weft threads and stiff warp threads such as plain weaves are advisable (Blackout fabrics are not recommended).

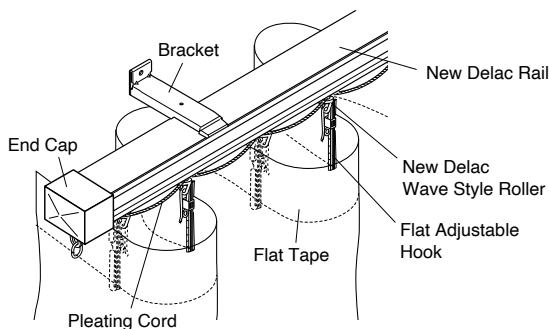


Wave Style Components

Pleating Cord

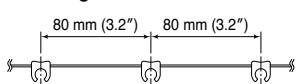


Flat Tape 75 mm


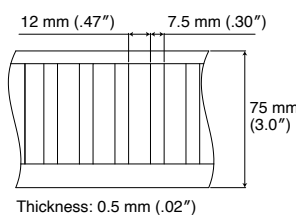


Flat Adjustable Hook 75 mm

*11 steps adjustable with 5 mm pitch

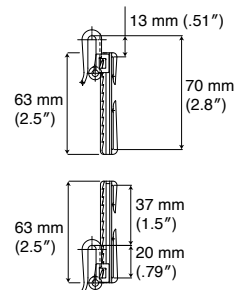


New Delac Wave Style Roller

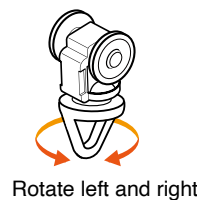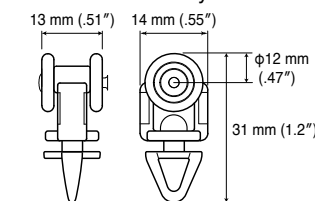

Rotate left and right


Wave Style Roller and Pleating Cord Installation

Insert the Pleating Cord into the New Delac Wave Style Roller.

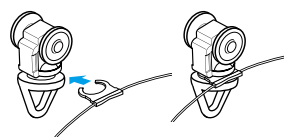

Wave Style Curtain


How to Sew Curtain with Flat Tape

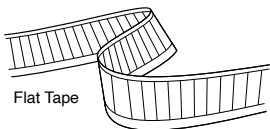


The Flat Tape for finishing the curtain wave appropriately.

Sewing Tips

- ① Put Flat Tape upside down so as to overlap about 15–20 mm (.59–.79") from the top edge of the curtain front side and sew it.
- ② Fold the curtain fabric once on the back side and sew it.
- ③ Fold the curtain fabric 3–5 mm (.12–.20") away from Flat Tape.

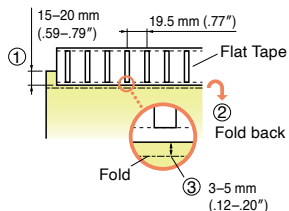


How to Sew Curtain with Weight Tape



Put the Weight Tape in the curtain hem makes a appropriate curtain wave. The Weight Tape is flexible, so it will be finished in a natural wave.

Sewing Tips

- ① Prepare the weight tape more than the width. Put the full width in the folded part of the hem.
- ② Close hand-sewn from the back side for each seam so that the Weight Tape becomes average.


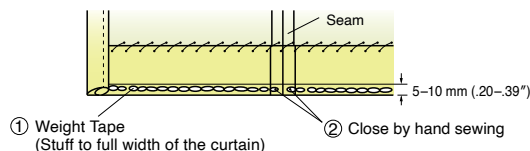


New Delac with Wave Style Components


Curtain Baton (Option)

Using the Curtain Baton, the curtain opens /closes smoothly.

The Curtain Baton has the following effects, keep the shape of the curtain and prevent dirt.

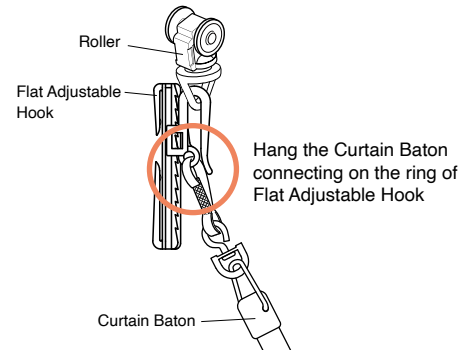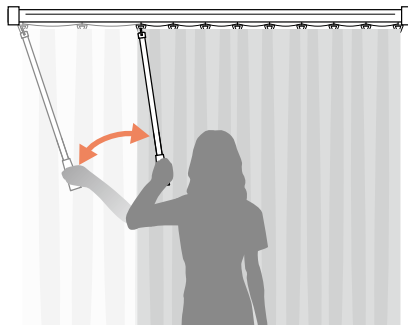


Bracket Installation Interval and Allowable Curtain Load

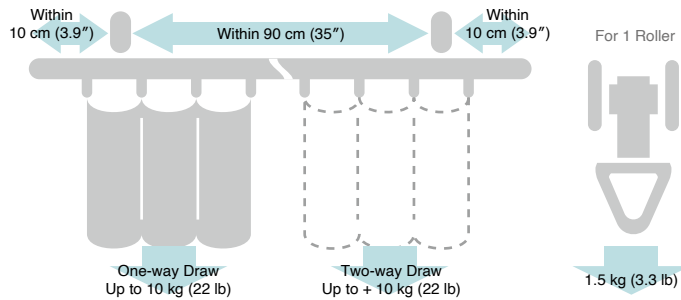

Materials and Finishes

Rail Section

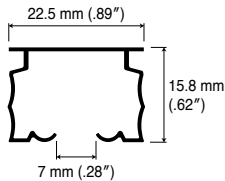


Parts	Material	Finish	
Rail	Aluminum alloy extrusion material	Silver	Alumite
		Umber	Alumite umber
		Black	Alumite black
		White	Alumite white
		Warm white	Alumite warm white

Parts	Material	Finish
Roller	Natural	High density polyethylene
Pleating Cord	White	Cord: Chemical fiber Bush: Polyacetal


Installation Dimensions

Ceiling Attachment

Direct attachment

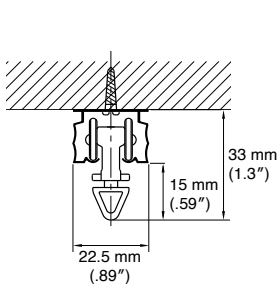


Ceiling Single Bracket Bracket width = 18 mm (.71")

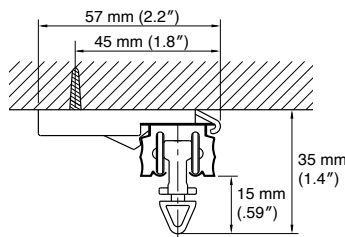

Wall Attachment

Single Bracket Bracket width = 19 mm (.75")

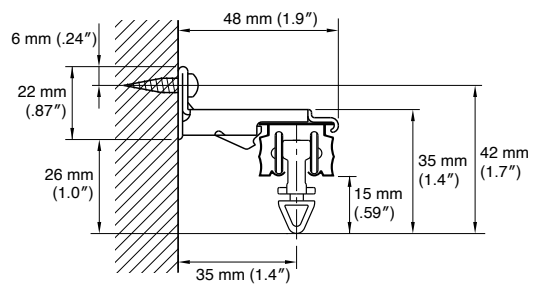

New Delac with Wave Style Components—Parts

Product Name	Product Code	Product Name	Product Code
New Delac Wave Style Roller Set (100 m)	00210355	Flat Adjustable Hook 75 mm (300 pcs)	00340246
Flat Tape 75 mm (50 m)	00400115	Weight Tape Stainless 14 (100 m)	30004957

Curtain Wand

To keep the Wave Style, the New Delac is available with a Curtain Wand that attaches to the leading MG Slider. It is easy to operate high curtains and thick/heavy curtains, and prevents stains and wrinkles because the curtain fabric is not directly touched.

Curtain Wand / White (steel)

SIAA ISO 21702 Anti Virus
Inorganic antiviral processing agent /printed
Grip
JP0612873X0004M

SIAA ISO 22196 Anti Bacteria
Inorganic synthetic antibacterial finishing agent /printed
Grip
JP0122873X0004I

54 mm (2.1")
450 mm (18")
700 mm (27")
900 mm (35")
1,200 mm (47")
1,500 mm (59")

φ8 mm (0.31")
80 mm (3.1")
φ17 mm (0.67")

Anti-virus and anti-bacterial processing

Materials	steel	
-----------	-------	--

Curtain Wand Product Code		
White	450 mm	30018973
	700 mm	30018974
	900 mm	30018975
	1,200 mm	30018976
	1,500 mm	30018977

Curtain Wand / Crear (resin)

SIAA ISO 21702 Anti Virus
Inorganic synthetic antiviral processing agent /printed
Bottom of pole
JP0612873X0005N

SIAA ISO 22196 Anti Bacteria
Inorganic synthetic antibacterial finishing agent /printed
Bottom of pole
JP0122873X0005I

54 mm (2.1")
450 mm (18")
700 mm (27")
900 mm (35")

φ10 mm (0.39")
130 mm (5.1")
10 mm (0.39")

Anti-virus and anti-bacterial processing

Materials	resin	
-----------	-------	--

Curtain Wand Product Code		
Clear	450 mm	30018978
	700 mm	30018979
	900 mm	30018980

Curtain Wand White and Clear are SIAA safety standards compliant for antiviral performance. It reduces the number of specific viruses on the product.

The SIAA mark is displayed on products that have been evaluated according to the ISO 21702 and ISO 22196 methods, and whose quality control and information have been disclosed under the Antimicrobial Product Technology Council guidelines.

Anti-virus processing

- This product is not a pharmaceutical product.
- It uses antiviral materials that meet the safety standards of SIAA.
- This product conforms to SIAA safety standards.
- Antiviral processing is not intended to treat or prevent diseases.

Antibacterial processing

- This product is not a pharmaceutical product.
- It does not inhibit the growth of all bacteria.
- This product uses antimicrobial materials that meet SIAA safety standards.

Curtain Wand / Gray (rope type)

54 mm (2.1")
700 mm (27")
900 mm (35")

φ5 mm (0.20")
100 mm (3.9")
φ20 mm (0.79")

Materials	700	900
rayon	58 %	57 %
cotton	37 %	39 %
polyester	5 %	4 %

Curtain Wand Product Code		
Gray	700 mm	30018981
	900 mm	30018982

How to Use the Curtain Wand



Photo is the White (steel).

Approximate Curtain Wand Length

Rail height position	2,200–2,400 mm	2,000–2,200 mm
Wand length	900 mm	700 mm

*In case used by a person with a height of 155 cm